item

Timing-Belt Reverse Unit 5 40 R10 with Bore D12
Notes on Use and Installation

item

Content

General safety information	3
Correct use	3
Application	4
Application options	4
Installing the Timing Belt	5
Fastening Options	6
Alignment of Timing-Belt Reverse Unit to the Profile	6
Synchronising Sets LRE	6
Maintenance	7

General safety information

The data and the information contained in the Notes on Use and Installation are intended exclusively for product description and assembly. The information does not release the user from conducting their own assessments and checks. It should be noted that our products are subject to natural wear and tear as well as an aging process.
These Notes on Installation and Useinclude important information for the safe and appropriate use of the product. In the case of a sale, rent or other transmission of the product, the latter must be accompanied by the Notes on Use and Installation.
During the assembly, operation and maintenance of the driven linear unit, it must be ensured that all moving parts are secured against accidental switch-on or moving. Rotating and moving parts can lead to serious injury! Please make sure to read and observe the following safety precautions.

- Any work with or close to the driven linear unit must be performed under the motto “safety first”.
- Switch the drive unit off before you begin a task close to the driven linear unit.
- Secure the drive unit against accidental switch-on, e.g. by installing signs near the switch or remove the fuse from the power supply.
- Do not reach into the working area of the moving parts of the driven linear unit while it is operating.
- Secure the moving parts of the driven linear unit against accidental contact by installing protective devices and enclosures.
- Please take note of the applicable regulations for accident prevention and environmental protection in the country of use and the workplace.
- Use item products only in technically perfect condition.
- Non-use of original spare parts leads to the expiry of the warranty!
- Check if the product has obvious defects.
- Use the product exclusively within the range of performance described in the technical data.
- Make sure all the safety devices belonging to the product are available, suitably installed and fully functional.

You are not allowed to change the position of, avoid or disable safety devices.

The driven linear unit described here corresponds to the state-of-the-art and respects the general principles of safety at the date of printing of the present Notes on Use and Installation. Nonetheless, the hazard for personal injury and damage to property remains when the fundamental safety instructions and warning notices mentioned in the present Notes on Use and Installation are not observed.We accept no liability for any damage that may arise from them. In the interest of further development, we reserve ourselves the right to technical changes. Keep the present Notes on Use and Installation readily accessible to all users. Please take notice of the superordinate instructions for use of the complete machinery or equipment.The general hazard warning refers to the whole life cycle of the partly completed machinery.

1. Transport
Please note the transport instructions on the packaging. Make sure to leave the product in the original packaging and protect it from humidity and damage until assembly. Please note that moving parts are fixed and can cause no damage during transport.

2. Assembly
Always switch the relevant system component off-circuit before you assemble the product or plug/unplug it. Secure the system against re-starting. Lay the cables and conducts so that they cannot be damaged and nobody can trip over them. Avoid places with risk of slipping, tripping or falling.

3. Putting into service
Let the product acclimatise for some hours before putting it into service.Make sure the partly completed machinery is tightly and safely integrated to the complete machinery. Only put fully installed products into service.

4. During operation
Allow the access to the direct operational area of the system only to people authorised by the operator. This also applies for downtimes of the system. Moving parts must not be accidentally actuated. In case of emergency, error or other irregularities, switch off the system and secure it against restarting. Make sure people cannot be shut in the system’s danger zone.

5. Cleaning
Close all openings with appropriate protective devices so that no detergent can enter the system. Use no aggressive detergents. Do not use a high-pressure cleaner for the cleaning.

6. Putting into service and maintenance
Perform the required maintenance work in the time intervals described in the operating instructions. Make sure no connection line, connection or component is released until the system is under pressure and tension. Secure the system against restarting.

7. Disposal
Dispose of the product according to the national and international provisions of your country.

Correct use


The Timing-Belt Reverse Unit 5 40 R10 with Bore D12 is a mechanical component to built a linear driven unit. The driven linear unit is a product in accordance with the Machinery Directive 2006/42/EC (partly completed machinery). The driven linear unit can only be used in accordance with the technical data and safety regulations of the present documentation. The internal rules and guidelines of the country of use must be respected. Unauthorised structural changes to the driven linear unit are not permitted. We accept no liability for any damage that may arise from them.

- You are authorised to assemble, operate and maintain the drive linear unit only if:
- The driven linear unit has been integrated to the complete machinery according to the intended applications and safety requirements.
- You have read the Notes on Use and Installation carefully and understood them.
- You are qualified.
- You have the authorisation of your company.
- You exclusively use the original accessories of the manufacturer.

In case of unsafe and inappropriate operation of the driven linear unit, there is a danger of serious injury from crush and shear points.

Inappropriate use
The inappropriate use refers to applications differing from the use authorised by the Notes on Use and Installation and the appropriate use. We accept no liability for any damage that may arise.

Application

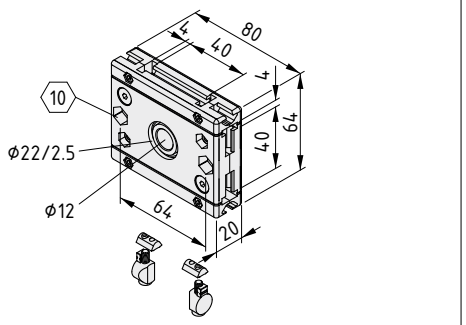

Zahnriemenumlenkung 5 40 R10 mit Bohrung D12

Zahnriemenumlenkung, GD-Al, schwarz
wälzgelagerte Zahnriemenscheibe mit Bohrung ∅ 12H7
Nabenlänge 18 mm
eine Umdrehung entspricht 140 mm
Wirkradius r_w = 22,3 mm, Reibmoment bei 1‰ Vorspannung des Zahnriemens:
M_R = 0,05 Nm
max. Belastung: M_D = 3,3 Nm
Zahnriemenlänge innerhalb der Zahnriemenumlenkung bei
Umlenkung um 90°: 110 mm
Umlenkung um 180° (Austritt auf 80er Seite): 135 mm
Umlenkung um 180° (Austritt auf 64er Seite): 150 mm
2 Universal-Verbindungssätze 5, GD-Zn, verzinkt
Zahnteilung p = 5 mm Zähnezahl z = 28
Anwendungs- und Montagehinweise
m = 259,8 g


1 Satz	0.0.662.73

Application options


It may be necessary to open Timing Belt Reverse Unit 5 40 R10 in order to insert the Timing Belt into it. To do this, remove all the screws.

Never use a screwdriver or similar tool to prise open the casing of Timing-Belt Reverse Unit 5 40 R10 at its joins, as you may unintentionally break off the belt cover.


Separate the two halves of the casing by gently tapping the hub of the timing pulley (use plastic punches). Once the casing is open, thread the Timing Belt through and then close Timing Belt Reverse Unit 5 40 R10 again.

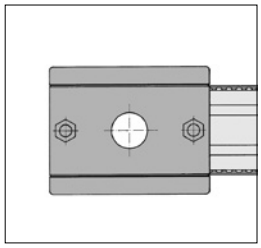


Timing belt turned around 180° on Line 5 profiles (height 40 mm): The timing belt is returned outside the profile.

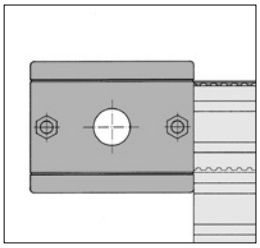

Timing belt turned around 180° on Line 5 profiles (height 40 mm): The timing belt is returned outside the profile.

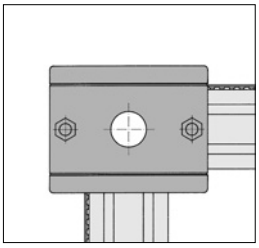

Timing belt turned through 90°.

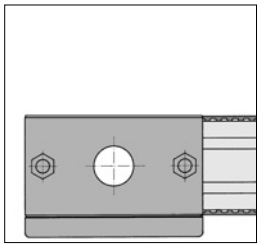


The upper and lower belt covers can be removed for applications with very limited space.

Installing the Timing Belt

It may be necessary to open Timing Belt Reverse Unit 5 40 R10 in order to insert the Timing Belt into it. To do this, remove all the screws.


Never use a screwdriver or similar tool to prise open the casing of Timing-Belt Reverse Unit 5 40 R10 at its joins, as you may unintentionally break off the belt cover.

Separate the two halves of the casing by gently tapping the hub of the timing pulley (use plastic punches). Once the casing is open, thread the Timing Belt through and then close Timing Belt Reverse Unit 5 40 R10 again.

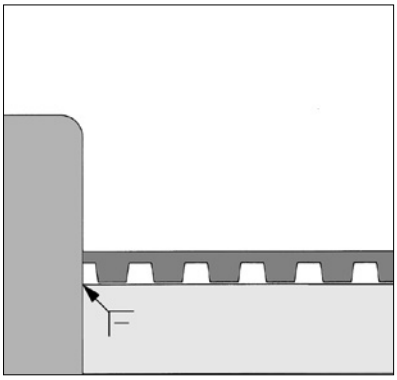


All the cut edges of the profile that face the Timing Belt must be chamfered to prevent irregular running caused by the belt getting snagged or damaged.


When feeding the Timing Belt back through the inside of profiles, ensure that

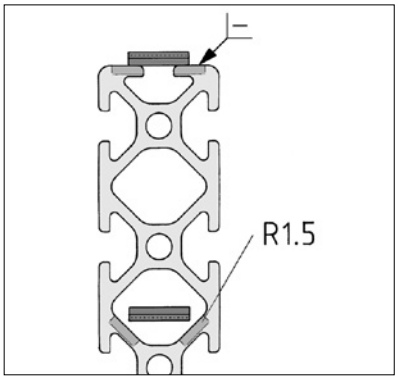


the profile edges facing the back of the belt have been rounded.

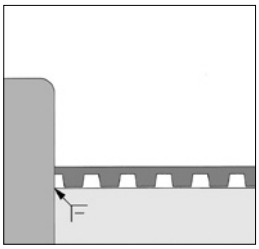


All cut profile edges facing the timing belt must be chamfered in order to prevent the belt from being damaged or sticking and running out of line.

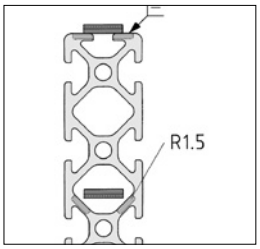

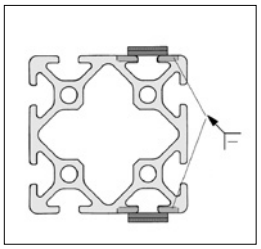


When running the belt back through the inside of profiles, the profile edge facing the back of the belt must be rounded.

Fastening Options

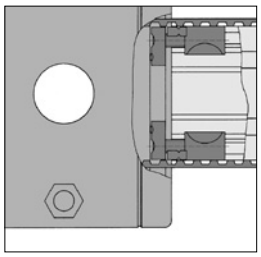


Mounting at a height of 40 mm in the groove of Profile 5 with Universal-Fastening Set 5.

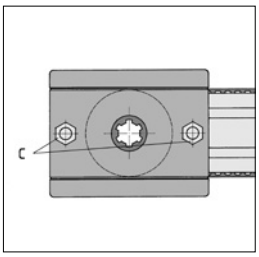


Function of bores:

Housing bores (c) for securing the drive units, adapter flange, bevel gear box and ball screw units and/or for interconnecting Timing-Belt Reverse Units.

Alignment of Timing-Belt Reverse Unit to the Profile

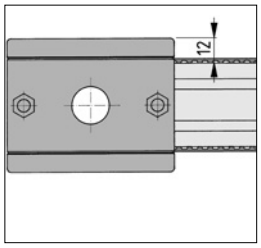

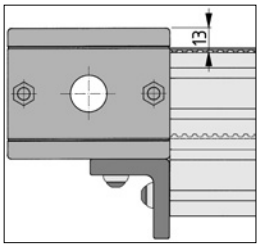

Fastening location of Timing-Belt Reverse Unit 5 40 R10 to different profiles, depending on the position of the return timing belt.

Synchronising Sets LRE

Synchronising Sets from item can be used to operate two Linear Units in parallel with just one motor. They comprise shaft couplings that are tailored to the relevant Linear Unit and designed to compensate for slight misalignments and withstand the stated torque over long-term use. The couplings are pre-prepared to accommodate a Synchroniser Shaft. Besides featuring a compact design, expanding hub couplings are also easy to use. The friction-based connection is created by tightening the central screw with the specified tightening torque. An integrated pull-off thread makes them easy to dismantle. First, the central screw is removed, then a longer screw is driven into the same position to effortlessly relieve tension in the coupling.

How long a Synchroniser Shaft can be depends on its operating speed. To determine the maximum length for a given speed or the maximum speed for a given length, please consult the information contained in the diagrams starting on page .



Lineareinheit	Art.-Nr.	Synchronisationssatz	Art.-Nr.	Zubehör
Lineareinheit LRE 5 D6 60x20 ZU 40 R10	0.0.666.89	Synchronisationssatz D30/D12	0.0.662.51	0.0.664.14

Maintenance

Suitable for use in dry conditions and over the temperature range -20°C to +70°C.

If operating conditions are unusual - e.g. special type of installation, dust, short stroke, influence of solvents etc. the lubrication intervals must be adapted accordingly.

This information does not discharge the user from the obligation to carry out his own assessments and checks.

It is important to bear in mind that our products are subject to a natural process of wear and ageing.

The Timing Belt is a maintenance-free drive element.

Check the tension on the Timing Belt after a running-in phase.

We recommend regular checks for damage and wear. These checks should be carried out weekly at first and then adjusted to account for environmental and operational conditions.

The Timing Belt may need to be replaced.

Ideal operating conditions:
Ambient temperature: 10°C ... 40°C
Load: < 5%

item

item Industrietechnik GmbH
Friedenstrasse 107-109
42699 Solingen
Germany

Phone +49 212 6580 0
Fax +49 212 6580 310

info@item24.com
item24.com



The latest version of these Notes on Use and Installation is available online, in the download section for this product.

0.4.XXX.XX 4/2019

© item Industrietechnik GmbH Made in Germany